

Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in P.

- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.


Stopping the engine

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “ENGINE START STOP” switch.

If the shift lever is in a position other than P when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to OFF. To avoid unexpected battery discharge, make sure the lever is in the P position when stopping the engine.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:

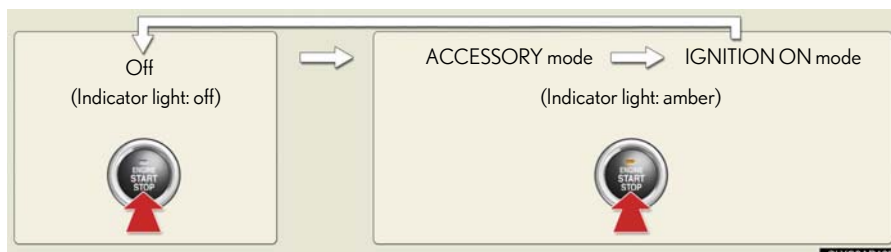

Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner's Manual”.

Turning the system on and off




- 1 Press the menu switch
- 2 Press the “ENTER” switch upwards or downwards until the Intuitive parking assist-sensor mark appears in the multi-information display.



- 3 Press the “ENTER” switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

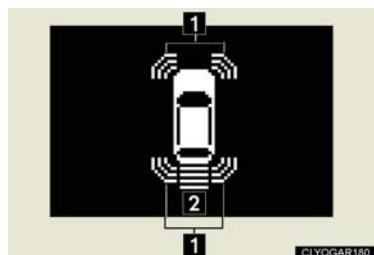

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

Multi-information Display and Switch

The multi-information display shows information about your vehicle, including the items shown below.

Multi-information switches



1 Menu switch

Changes modes to electronic features control mode, customization mode or back to normal display mode.

2 "ENTER" switch

Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Display contents



Trip information contents

- 1 Current fuel consumption
- 2 Average fuel consumption after refueling
- 3 Average fuel consumption
- 4 Average vehicle speed
- 5 Cruising range
- 6 Multi-information display OFF
- 7 Eco Driving Indicator Zone Display

Switching display items

Pressing the "ENTER" switch upwards or downwards.




Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P. 11
2 Snow mode	For details, see the Owner's Manual.
3 AFS*	For details, see the Owner's Manual.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Customization	
Dynamic radar cruise control settings*	
Warning message	

*: If equipped

- When using Intuitive parking assist-sensor or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator

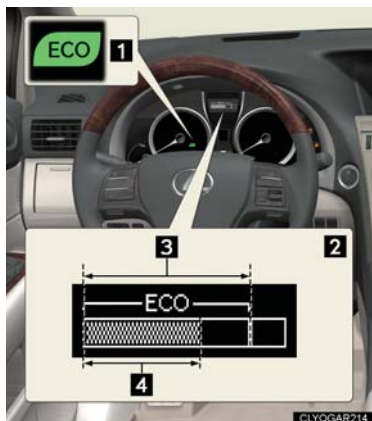

1 Eco Driving Indicator Light

During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on.

2 Eco Driving Indicator Zone Display

Suggests Eco driving range with current Eco driving ratio based on acceleration.

3 Zone of Eco driving

4 Eco driving ratio based on acceleration

If Zone of Eco driving is exceeded, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is anything other than D.
- The driving mode is set to snow mode.
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
 - 2 Accelerate or decelerate to the desired speed, and then push the lever down.
- Vehicle-to-vehicle distance can be adjusted using the distance switch.

Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling

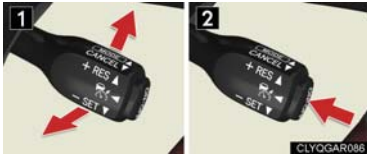

■ Adjusting the speed setting



The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Turn Signal Lever

► Type A




► Type B



1 Right turn signal

2 Left turn signal

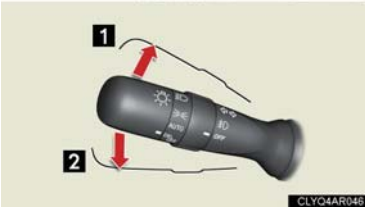

To signal a lane change, move the lever partway and hold.

Head-up Display (If Equipped)


The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display switches



- 1 Pressing the switch turns the head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents

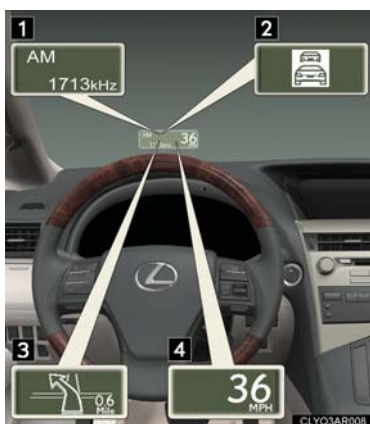

- 1 Audio display
- 2 Dynamic radar cruise control (if equipped)
- 3 Turn-by-turn navigation*
- 4 Vehicle speed display

- When using audio system or navigation system the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the head-up display.
- Pressing and holding the head-up display main switch for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch to turn the audio display on/off.
- The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".